

KNITTER'S™
P R I D E

SWIFT / SKEIN WINDER




SIGNATURE



NATURAL

www.knitterspride.com

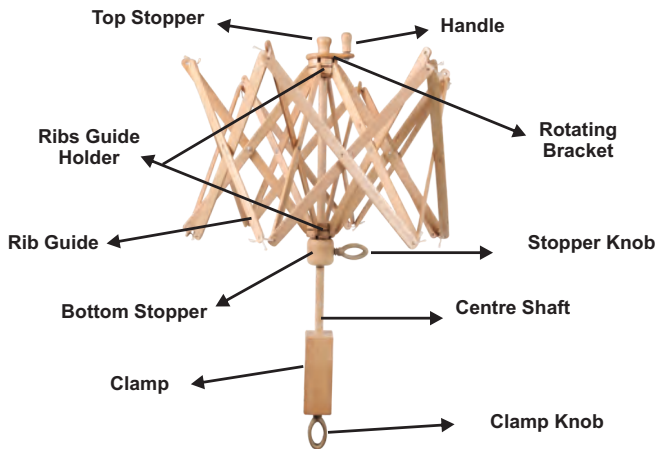

1. Clamp the yarn swift to a table top or desk and tighten the clamp knob so that it doesn't wobble.
2. Untwist the hank to look like a big circle of yarn and loop the hank around the ribs of the swift.
3. Open the yarn swift pushing the bottom stopper upwards along the center shaft so that the ribs expand and hold the opened hank of yarn in place.
4. Secure that position by tightening the stopper knob.
5. Cut the ties around the opened hank of yarn.
6. Find the end of the yarn that points to the outside of the skein. Pulling the outside end won't tangle the yarn. As you pull the end of the yarn, the yarn swift rotates making the winding easy.
7. You may wind the yarn into a ball using our wool winder (sold separately).

The winding handle, (see picture), makes it easy to wind onto the Skeinwinder. Just attach your yarn and use the handle to turn the swift, winding a skein as it turns. (always remember to tie your skein in a few places before removing)

